



Installationsanleitung FiberDose für FTTH Basic
Installation guide FiberOutlet for FTTH Basic
Instructions de montage boîtier fibre pour FTTH Basic

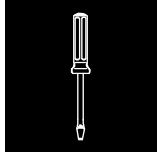


021.2980

A1 Markierung & Bohren - \varnothing 6mm
Mark & drill - \varnothing 6mm






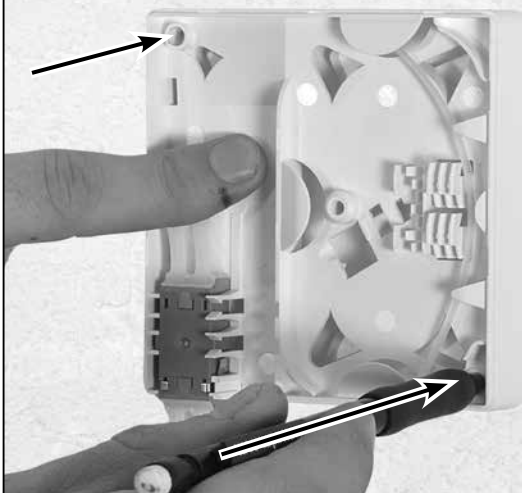







021.2981

A2 Varianten L1, L2
Methods L1, L2

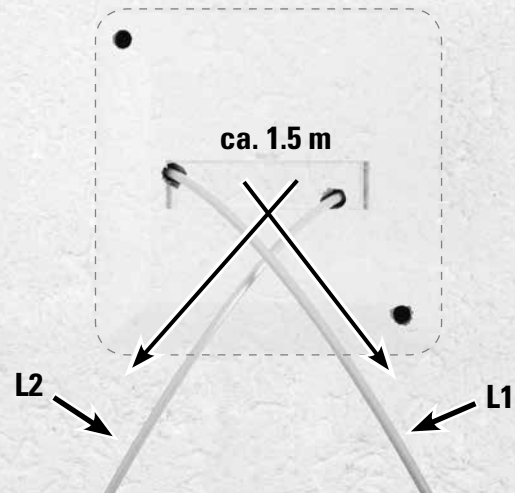

021.2982

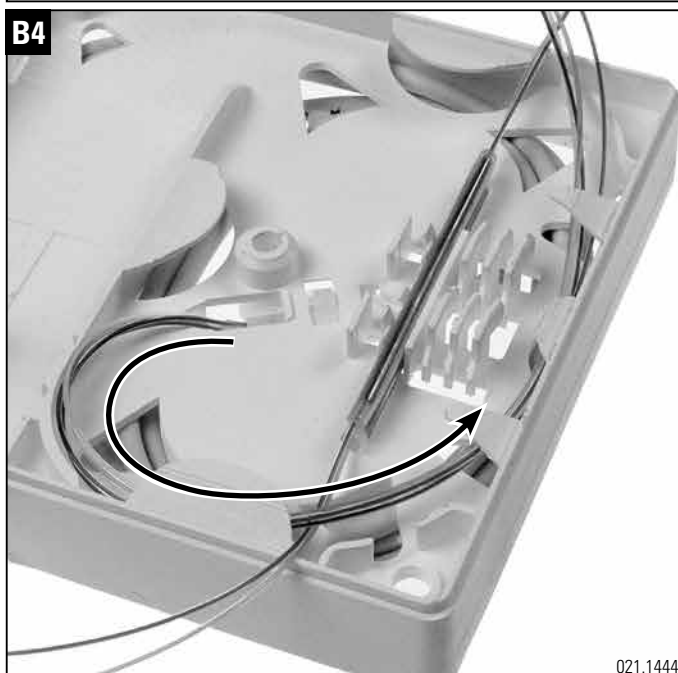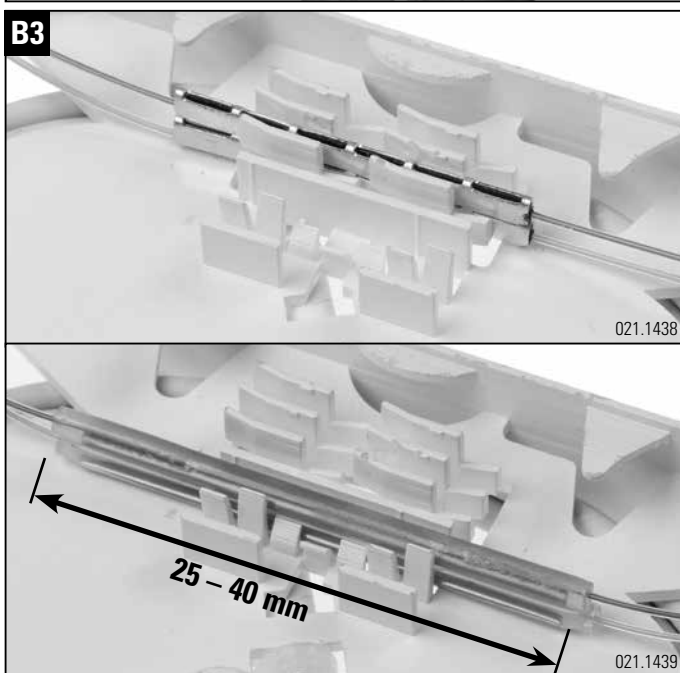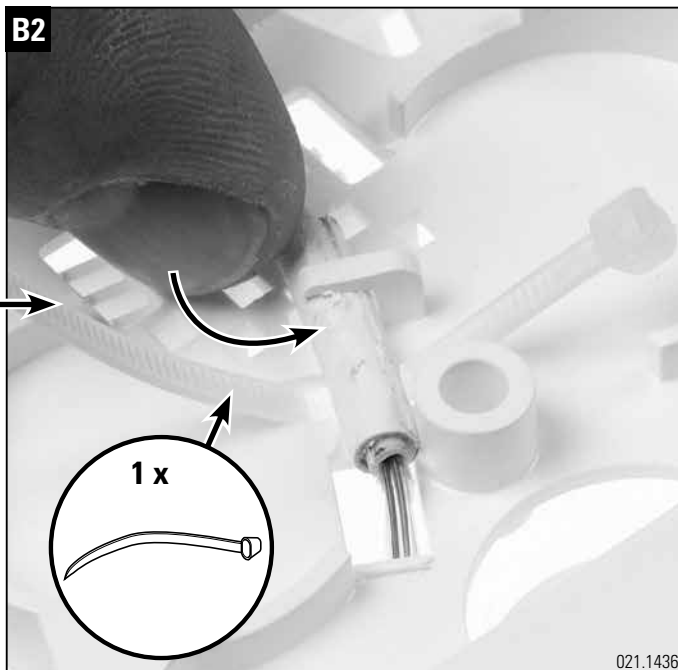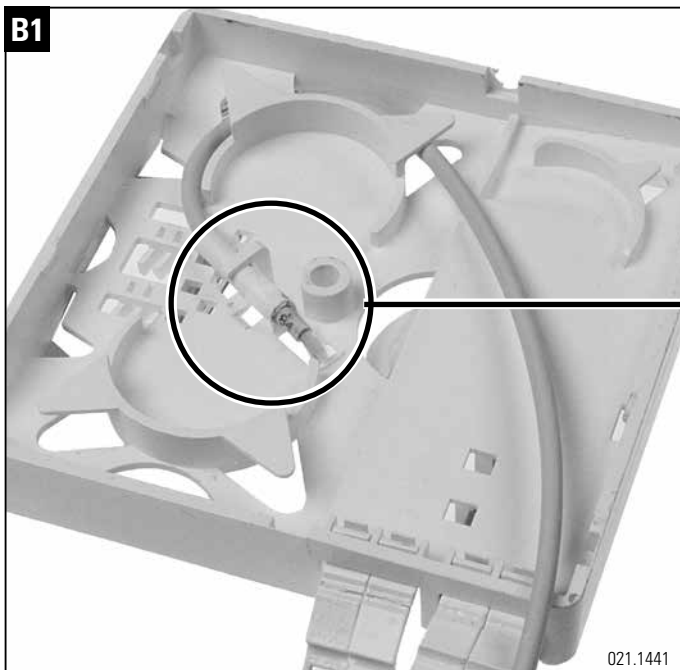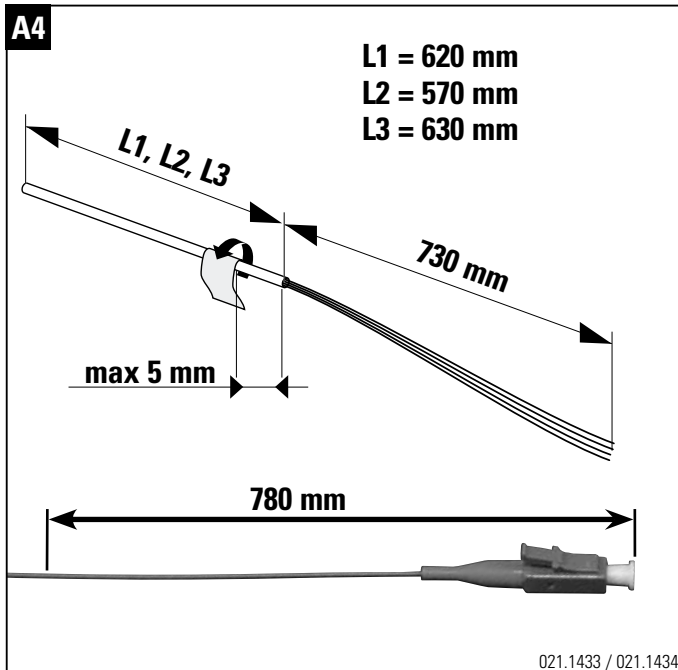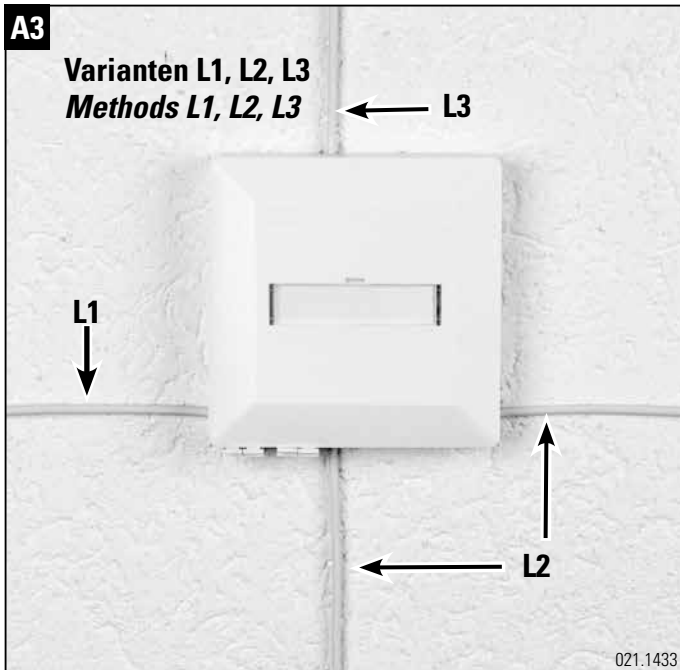

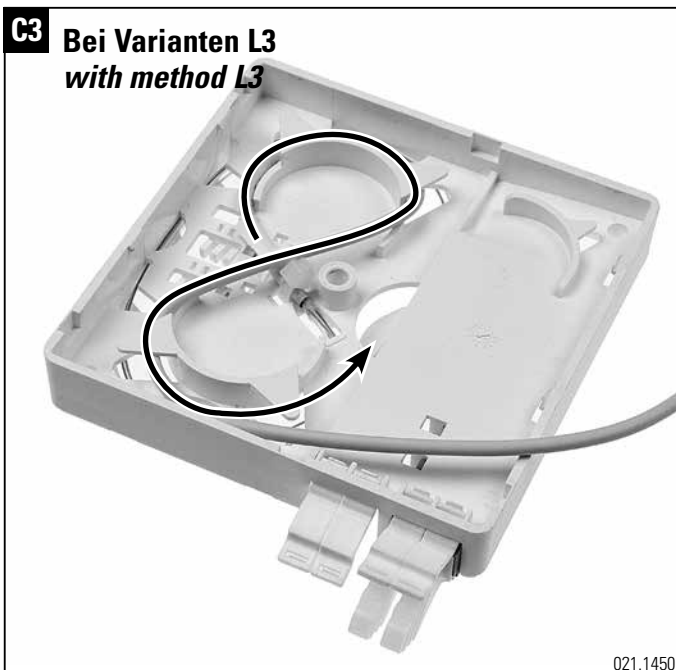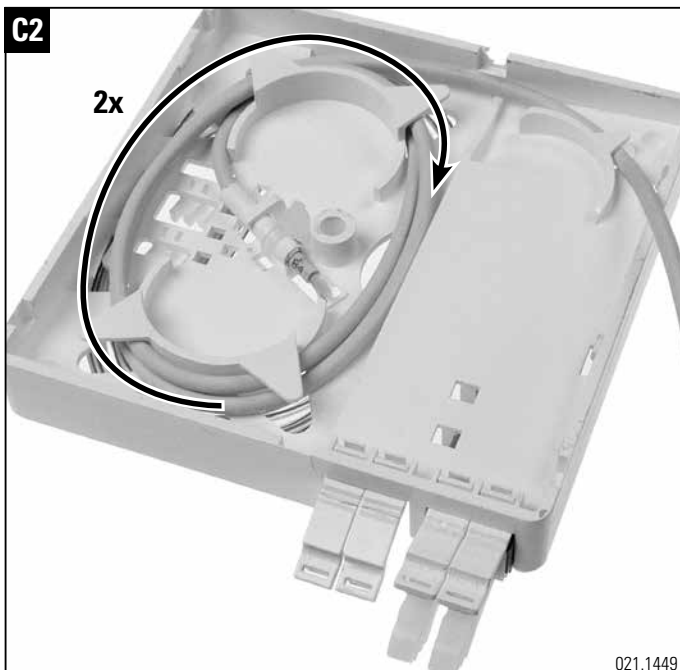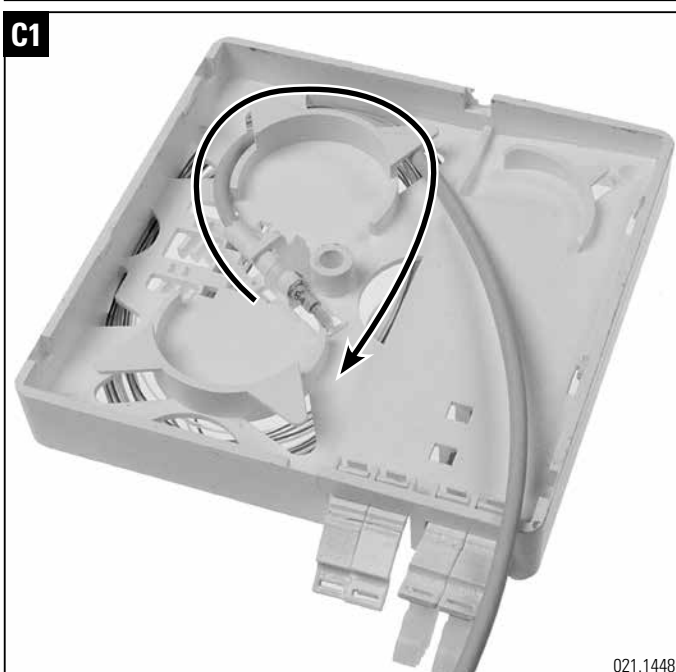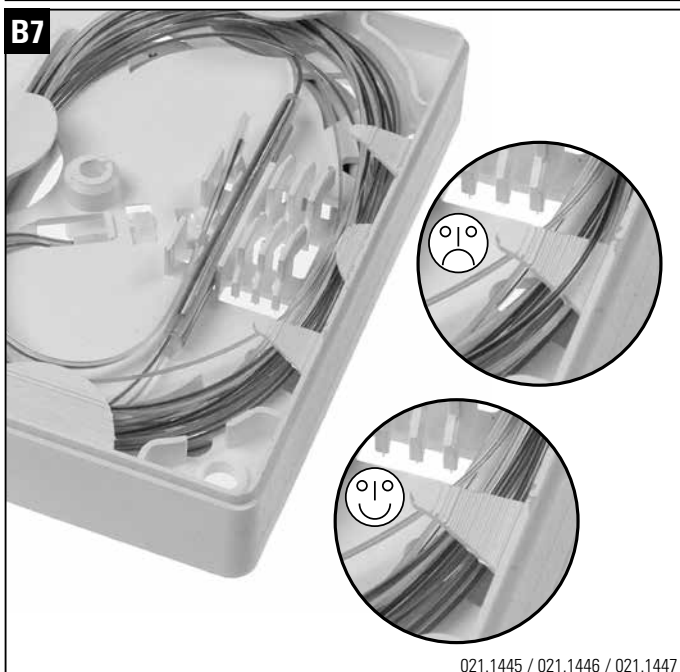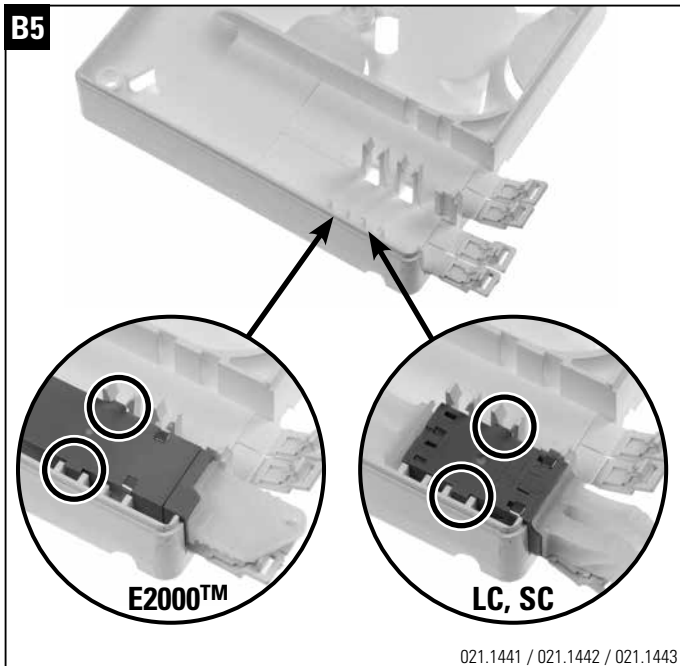


C4 Bei Varianten L3
with method L3




021.1451

D1

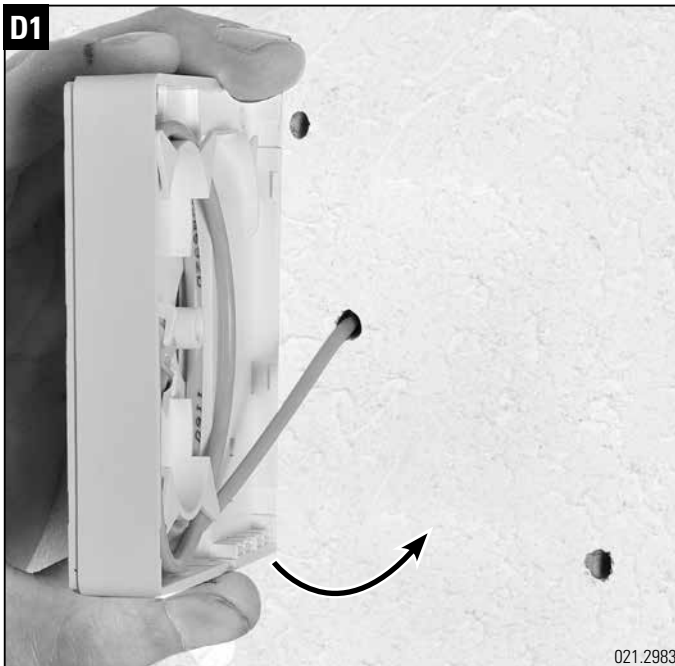


021.2983

D2

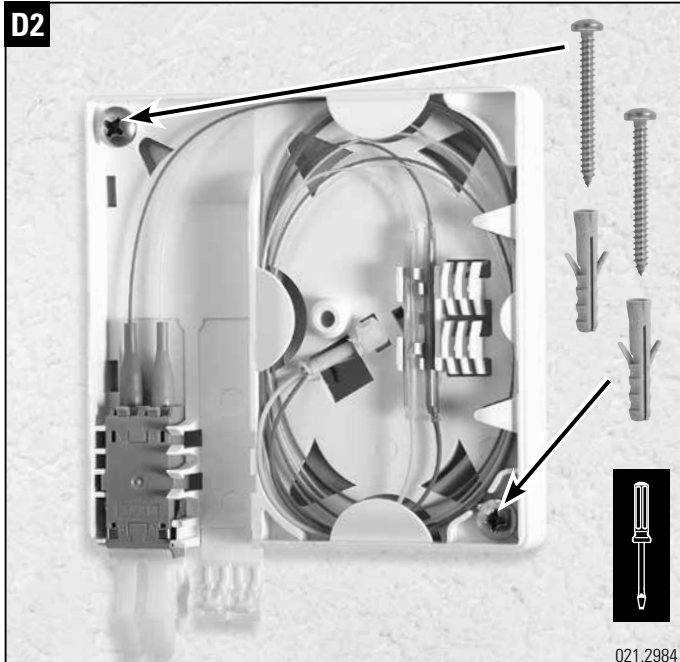


021.2984

E3

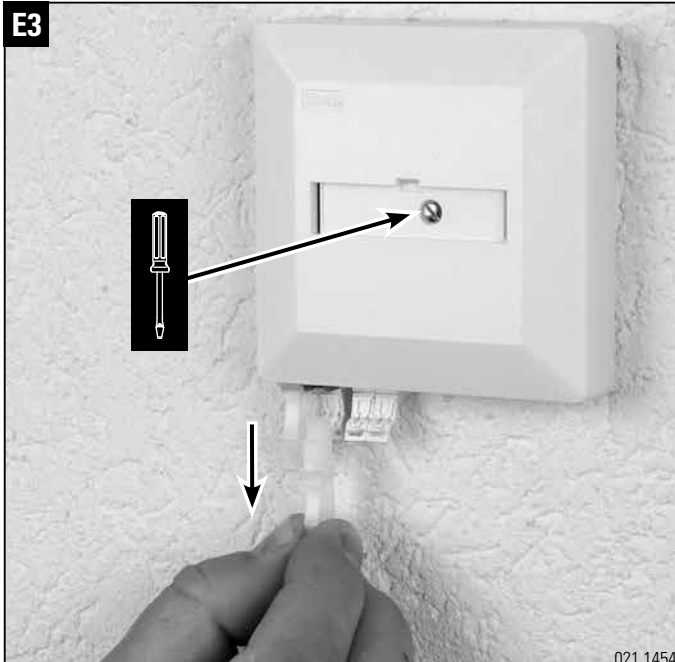

021.1454

E4

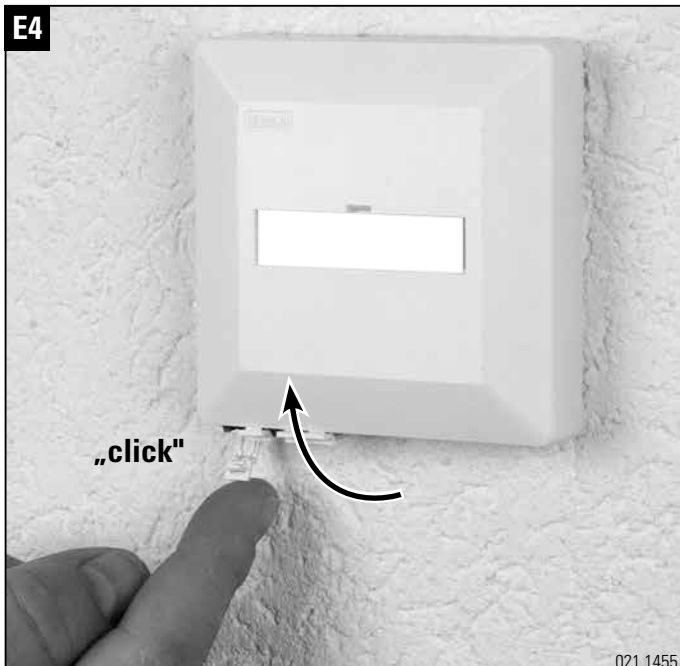

021.1455

Headquarters

Switzerland

Reichle & De-Massari AG

Binzstrasse 32

CHE-8620 Wetzikon

Telephone HQ +41 (0)44 933 81 11

Telefax HQ +41 (0)44 930 49 41

E-Mail hq@rdm.com

www.rdm.com

R&M